

CLEANING PROCEDURE

DYCEM® FIXED MATS




1. Clean mats at least once a day (or as advised by your specialist) to maximize performance. A Dycem-approved cleaning solution (diluted per instructions) should be used.




2. Using a spray bottle, mop, or pre-saturated wipe, apply the diluted cleaner to the entire mat ensuring complete coverage. For larger installations, complete all cleaning steps in sections.



3. Using a squeegee system, such as a Vikan, agitate the surface of the mat to lift the retained particulates.

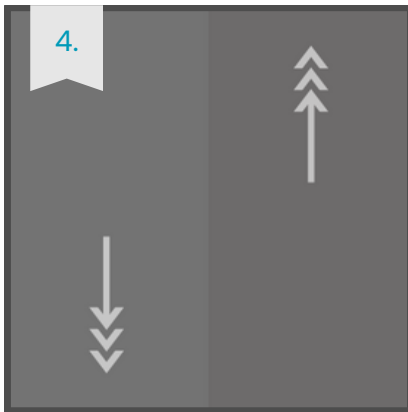

4. Mats should be agitated in both a vertical and horizontal direction to ensure all contamination is lifted and removed. Start closest to the controlled area and work backwards.

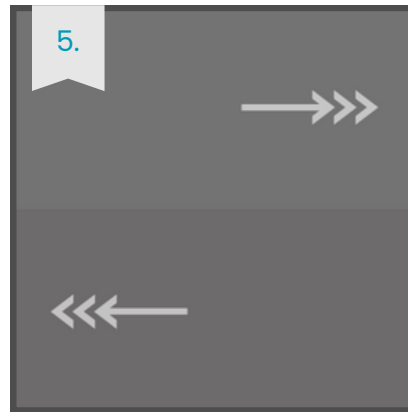

5. Continue to agitate with the squeegee in a horizontal direction, starting closest to the controlled space and working outward.



6. Pull the dirty liquid to the edge of the mat surface using the squeegee. Collect with a sponge, mop, or cloth and dispose in accordance with facility mandated SOP's. For heavily saturated mats, repeat cleaning steps 1-6.

Tips & Advice

- For maximum performance, clean your Dycem mats at least once a day (or as advised by your specialist) with the following:
 - DyClean or approved cleaner
 - Spray bottle or mop
 - Squeegee system
- After cleaning, make sure to wash out any equipment per your company's Standard Operating Procedures.
- To remove built-up spots of contamination, clean with a 70/30 isopropyl alcohol (IPA) wipe.
- Where use of a phenolic or hydroxide is required, rinse as per the instructions to reduce a film buildup and loss of effectiveness.
- For mats heavily saturated with contamination, contact Dycem customer service team to schedule a deep clean.
- CAUTION: DO NOT USE concentrated bleaching agents, scoring or abrasive powders, or cleaning, buffing or polishing machines with stiff brushes – Shortened lifespan or damage to the Dycem surface may occur.

