



# CLEANING PROCEDURE

## DYCEM® FLOATING MATS

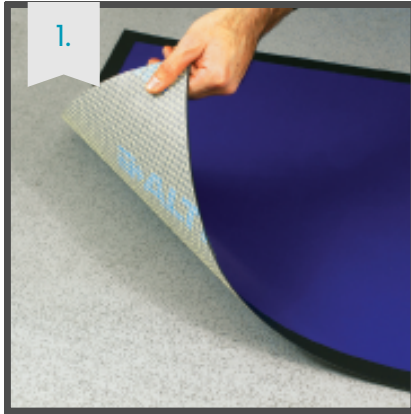

1. For optimal performance, daily cleaning is recommended. Before cleaning a floating Dycem mat, lift the mat and remove it to reveal the subfloor.

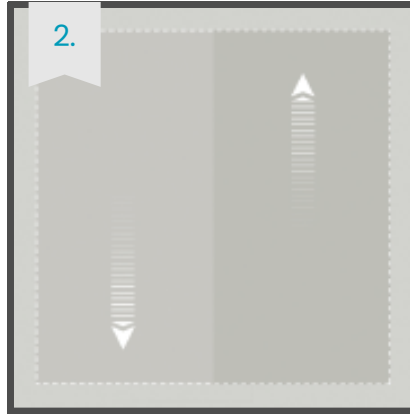


2. Clean the subfloor per facility protocol and remove excess liquid with a squeegee system, such as a Vikan, ensuring a dry surface.




3. Clean the underside of the Dycem mat using an isopropyl alcohol wipe (70/30 IPA recommended) and allow to dry.



4. Replace Dycem mat onto subfloor. Using a spray bottle, mop, or pre-saturated wipe, apply an approved diluted cleaner to the entire mat ensuring complete coverage.

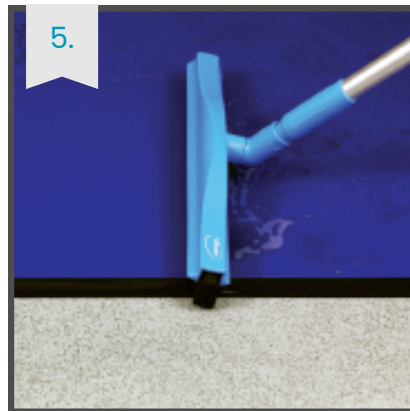

5. Using a squeegee system, such as a Vikan, agitate the surface of the mat lifting the retained particulates. Working from closest to the controlled area moving outwards, agitate in both a vertical and horizontal direction for maximum contamination removal.

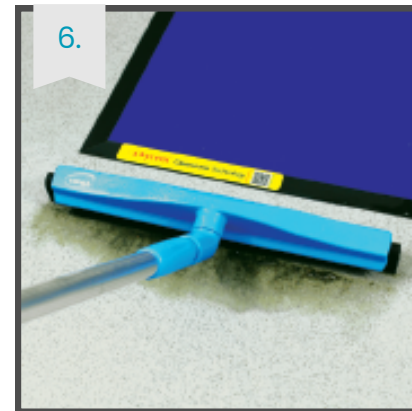

6. Pull the dirty liquid to the edge of the mat surface using the squeegee. Collect with a sponge, mop, or cloth and dispose in accordance with facility mandated SOP's. For heavily saturated mats, repeat cleaning steps 1-6.

## Tips & Advice

- For maximum performance, clean your Dycem mats at least once a day (or as advised by your specialist) with the following:
  - DyClean or approved cleaner
  - Spray bottle or mop
  - Squeegee system
- **DON'T FORGET** to clean the underside of the mat and the subfloor.
- After cleaning, make sure to wash out any equipment per your company's Standard Operating Procedures.
- To remove built-up spots of contamination, clean with a 70/30 isopropyl alcohol (IPA) wipe.
- **CAUTION: DO NOT USE** concentrated bleaching agents, scoring or abrasive powders, or cleaning, buffing or polishing machines with stiff brushes – Shortened lifespan or damage to the Dycem surface may occur.

