


CLEANING PROCEDURE

DYCEM® ACCESS PANELS



Method 1: Pre-saturated wipes

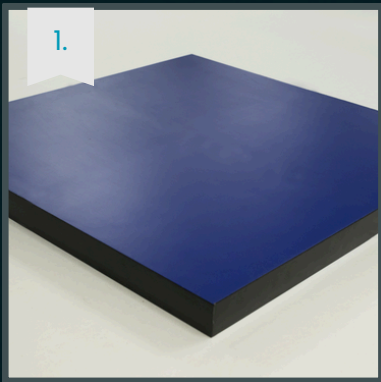

For optimum performance, clean Dycem Access Panels daily.




Clean using a pre-saturated wipe (isopropyl alcohol wipe – 70/30 IPA recommended).



Apply pressure and wipe over the surface until dirt is removed. Allow to dry.


Method 2: Spray & flat mop

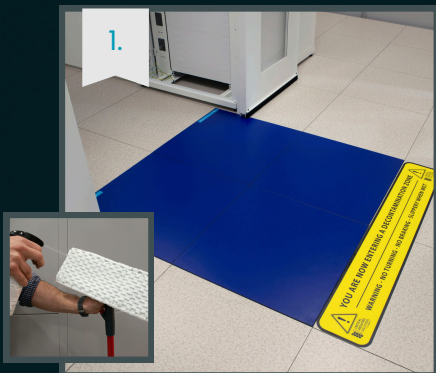

Apply Dycem-approved cleaning agent to the flat mop or use a spray bottle to cover the surface.



Using a flat mop, clean the surface, working away from the controlled area.

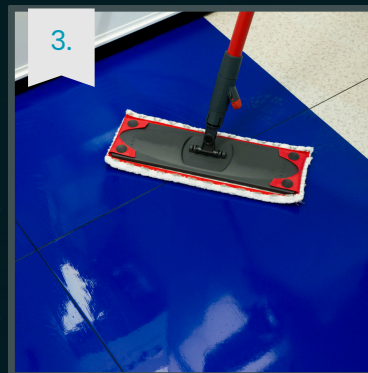

Use a dry flat mop, wipe, or squeegee to pick up the excess liquid if necessary.

Tips & Advice

For maximum performance, clean your Dycem flooring at least once daily, or as recommended by your Dycem specialist.

You will need:

- InSpec N10 or another approved cleaning solution
- A spray bottle or pre-saturated wipes
- A flat mop

After cleaning:

- Thoroughly rinse all cleaning equipment so it is ready for its next use.
- If a phenolic or hydroxide-based product is used for decontamination or sterilization, rinse the Dycem surface according to the product instructions. Failure to rinse thoroughly may leave a film that reduces Dycem's effectiveness.

Important:

- For heavily contaminated areas, contact Dycem's Customer Service team to discuss the most appropriate cleaning solution.
- Do not use concentrated bleach, scouring or abrasive powders, stiff-bristled cleaning machines, buffing machines, or polishing machines. These products and methods may damage the surface and shorten the working life of your Dycem.
- Before using any mechanical cleaning equipment, check with your Dycem representative to confirm compatibility.

Questions?
contact@dycem.com

