


CLEANING PROCEDURE

DYCEM® FIXED MATS




Clean Dycem mats once per day, or after each shift in high-traffic areas, to ensure optimal performance. Always use a Dycem approved cleaning solution to maintain the mat's effectiveness.

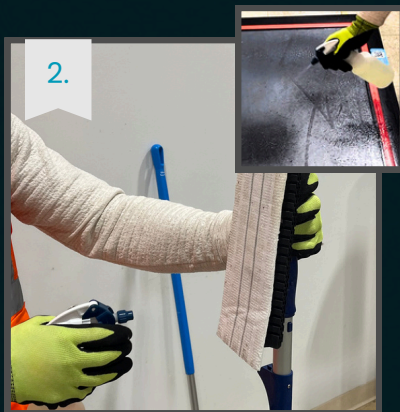


Using a spray bottle, mop, or pre-saturated wipe, apply the diluted cleaner to the entire mat ensuring complete coverage. For larger installations, complete all cleaning steps in sections.




Using a squeegee system, such as a Vikan, agitate the surface of the mat to lift the retained particulates.

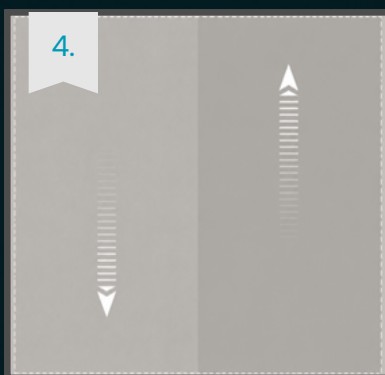

Mats should be agitated in both a vertical and horizontal direction to ensure all contamination is lifted and removed. Start closest to the controlled area and work backwards.

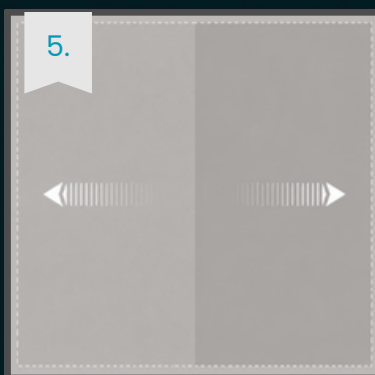

Continue to agitate with the squeegee in a horizontal direction, starting closest to the controlled space and working outward.

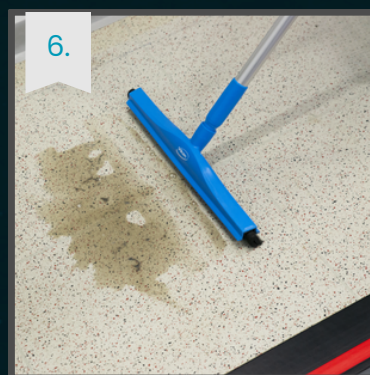

Pull the dirty liquid to the edge of the mat surface using the squeegee. Collect with a sponge, mop, or cloth and dispose in accordance with facility mandated SOP's. For heavily saturated mats, repeat cleaning steps 1-6.

Tips & Advice

- For maximum performance, clean your Dycem mats at least once a day (or as advised by your specialist) with the following:
 - InSpec N10 or approved cleaner
 - Spray bottle or pre-saturated wipes
 - Flat mop
- After cleaning the Dycem, wash out any equipment so that it is ready to reuse.
- Where decontamination or sterilisation takes place using a phenolic or hydroxide, rinse as per the instructions. Otherwise a film will develop reducing the effectiveness of Dycem.
- For heavily decontaminated areas, contact Dycem's customer service team who will be happy to discuss the best solution with you.
- DO NOT USE concentrated bleaching agents, scouring or abrasive powders, or cleaning machines with stiff brushes. Buffing or polishing machines will damage the surface, shortening the active working life of the Dycem.
- If you would like to clean mechanically, please check with your Dycem representative to see if it is compatible.
- If you have any questions or concerns, or would like to schedule a Dycem deep clean, please get in touch.

CONTACT@DYCEM.COM

